
User Instructions CMOD 250 Spreader Frame



The CMOD Spreader Frame is modular in span and every frame consists of 4 Corner Units, with intermediate Struts that can be bolted into the assembly to achieve different spans. CMOD 250 has an assembled span ranging from 2m by 2m to 20m by 20m and all spans inbetween.



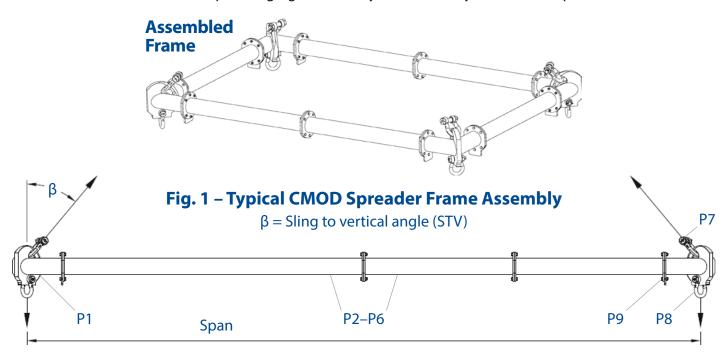

CMOD 250 Frame Specification

- Rated at a maximum of 300 tonnes WLL.
 Please see **Table 2** for WLL at specific spans.
- 'Sling to Vertical' angle, β, 45 degrees or less.
- Corner Units are rated at 75 tonnes each (300 tonnes combined capacity).

Table 1 – Component List

Part Ref.	Description	Weight/item					
P1	Corner Unit (length 1m each)	1190kg					
P2	6.0m Strut	860kg					
P3	3.0m Strut	495kg					
P4	2.0m Strut	375kg					
P5	1.0m Strut	255kg					
P6	0.5m Strut	192kg					
P7	150t Heavy Duty Shackle	160kg					
P8	125t Wide Body Shackle	92kg					
P9	M24 x 80, Grade 8.8, HT Bolts, Nuts & Washe						

- Bolt tightening torque: 250Nm. Spanner size required: 36mm.
- Recommended additional equipment: Torque Wrench, Podger Spanner and Ring Spanner.

⚠ WARNING!

- Personnel using this system should be suitably trained, competent and have a clear understanding of Safe Slinging procedures.
- The use of Modulift equipment must be in accordance with the procedures laid down in 'Lifting Operations and Lifting Equipment Regulations 1998' (LOLER).
- Never exceed stated WLL Adhere to WLL in **Table 2** for particular sling angle used.
- The top sling length is critical to the safe use of the spreader Ensure you refer to the correct table.

User Instructions CMOD 250 Spreader Frame



WARNING!

- Do not under any circumstances hang load(s) from the tube or flanges – the Spreader Frame is designed for compression – not bending.
- Ensure that the top Shackle contacts the bow of the corner plate 'bow-to-bow'.
- The CMOD system is designed in accordance with BS EN13155: Cranes, Safety, Non-fixed Load Lifting Attachments.
- Max number of Struts allowed in assembly: 5 per side
- Assemble longer Struts in the centre of the configuration
- Sling angle is crucial to safe use of frame.
- The top sling must be positioned centrally in the Shackle pin to ensure even loading. Contact your Modulift supplier for supply of loose spacers where required.

Do's & Don'ts

- Do ensure that the frame is only loaded at the Corner Units and they are all equally loaded.
- Do ensure enough clearance between frame and the load to prevent the load hitting the frame. Any collision could cause failure of the frame.
- Do not undertake a lift without the correct use of appropriate top slings.
- Do not hang any loads from the Strut tube or flanges.
- Do not exceed the stated WLL for your span.
- Do not rig the lower slings more than 6° from vertical.

Assembly Procedure

- Check the ID plates on each Modulift component to ensure the correct size is used.
- Lay out the Struts and Corner Units in the correct configuration.
- Check that all flanges are clear from debris, sand etc. before connection.
- Bolt the components together* using bolts, nuts & washers provided. Tighten the bolts to torque as shown overleaf.
- Loop the top Shackles through the bows of the Corner Units so they contact 'bow-to-bow'. The eye of the top slings can then be passed through the jaws of the Shackles and the pins replaced.
- Loop the bottom Shackles through the eyes of the drop slings and connect to the bottom of the Corner Unit with the Shackle pin.
- Attach the lower slings to the load to be lifted.
- The assembled Spreader Frame and lifting rig must be thoroughly checked by a competent person prior to lifting.

*The use of a Podger Spanner will aid in assembly by helping to align the bolt holes by forcing it through.

CMOD 250 UK JAN 2019 © Copyright 2019 Modulift. All rights reserved. Should you find your equipment is no longer of use, please dispose of in a responsible manner. Please contact Modulift if you need further guidance



Table 2 - Load v Span

First pick the span required for your frame (e.g. 2m x 5m) and the Sling Angle (we recommend 30° STV where possible), then check the WLL via the appropriate table. Read the table by locating the lower span on the y axis of the chart and the larger on the x. The cell which you are referred to, will indicate the WLL for your chosen span. If your exact span is not noted in the table, then please round up or down to the values that will give you the lowest WLL (to ensure no overloads are applied). Please contact Modulift for confirmation on your WLL if required. WLL given in tonnes.

CMOD 250: WLL / tonnes @ 30° STV

20												170							
19														190	165				
18														210	185	160			
17	230												205	180	155				
16	245 225											200	175	155					
15														265	240	215	195	170	150
14	280 255 230 210											210	190	165	145				
13	295 270 245 225 205										205	185	165	140					
12	300 280 260 240 220 2										200	180	160	140					
11										300	295	270	250	230	210	195	175	155	135
10	300							300	300	280	260	240	225	205	190	170	150	135	
9								300	290	270	250	235	215	200	185	165	150	130	
8								300	280	260	245	225	210	195	180	165	145	130	
7	300 300 300 285							285	265	250	235	220	205	190	175	160	145	125	
6					300	300	300	290	270	255	240	230	215	200	185	170	155	140	125
5				300	300	300	290	275	260	245	235	220	210	195	185	170	155	140	125
4			300	300	300	290	275	265	250	240	230	215	205	195	180	165	155	140	120
3		300	300	300	290	275	250	235	220	210	200	195	190	185	180	165	150	135	120
2	300	300	300	265	235	215	200	195	185	185	180	175	175	170	170	165	150	135	120
Span (m)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20

CMOD 250: WLL/tonnes@45°STV

20														95					
19													105	95					
18	120													105	90				
17	130 115													100	85				
16	140 125 115												100	85					
15	150 135 120 110												110	95	85				
14	160 145 130 120 105											105	95	80					
13	170 155 140 125 115 105											105	95	80					
12	170 160 150 135 125 115 100											100	90	80					
11	170 170 155 140 130 120 110 100										100	85	75						
10	170 170 160 150 135 125 115 105 95										95	85	75						
9	170 170 165 155 140 135 120 115									105	95	85	75						
8	170 170 170							160	150	140	125	120	110	100	95	80	75		
7	170 170						170	170	160	150	140	135	125	115	105	100	90	80	70
6	170 170						170	165	155	145	135	130	120	115	105	95	85	80	70
5	170 170 170					165	155	150	140	135	125	120	110	105	95	85	80	70	
4			170	170	170	165	155	150	140	135	130	120	115	110	100	95	85	80	65
3		170	170	170	165	155	150	145	140	135	125	120	115	105	100	95	85	75	65
2	170	170	170	160	155	150	145	140	135	130	125	120	115	105	100	95	85	75	65
Span (m)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20